WONGOX

WIRELESS CHARGER MANUAL

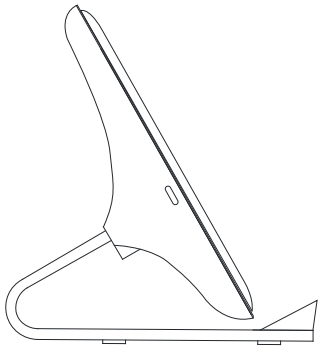

MODEL: X315

Model: X315

CONTENT

1. X315 Wireless Charging Stand x1
2. User Manual x1

SPECIFICATIONS

Type of Charging: QI inductive
Input: DC 9V/1.8A or
5V/2.4A
Output:5W, 7.5W, 10W
Charging Distance: 1mm - 8mm

Equipment that supports QI wireless charging standard

Need Help?
Email: **support@wongox.com**

WongoX
https://www.wongox.com
Copyright ©WongoX. All rights reserved 2019.

Feature

Say goodbye to tangled wires and lost chargers. The X315 Wireless Charging stand utilizes QI Inductive Charging Technology that eliminates the need to fumble with charging cables each time you want to charge your device.

QI Standard: Support wireless charging on all QI-enabled devices such as iphone / Samsung/HTC/LG/Nokia/Google etc.

Easy to setup and use. First, connect the included QC 3.0 Adapter to the X19's micro USB plug. Then, place your mobile phone vertically or horizontally onto the charging pad.

Built-in Smart Chip to protect your device from overcharging, when fully charged the wireless charger will change to sleep mode to protect your device's battery.

How to Use

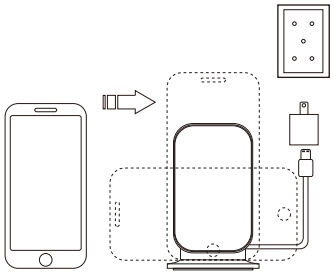

1. Connect one end of USB to the power adapter.
2. Connect the power adapter to the power.
3. The wireless charger lights on for one second.

* it is recommended to choose an adapter that outputs 5V / 2A or QC 3.0 quick charge adapter.

Charging Positions

Place the mobile phone vertically or horizontally onto the center of the charging dock. A led response will light to signal if the phone was properly placed. Refer to the LED Indicator chart for complete lighting signals.

Safety tips

Only use the wireless charger to charge your phone. The wireless charger has sensitive components and shouldn't be mishandled, or dropped. It cannot be immersed in water, otherwise the internal parts and structures will be damaged. Please do not continue to use the product if it is damaged. If the product is exposed to any pollutant that may cause pollution, such as ink, dye, cosmetics, dust, food, oil, lotion, etc., wash immediately. If cleaned, remove all cables connected to this product and wipe with a soft, slightly damp cloth. Do not use window cleaners, household cleaners, sprays, solvents, alcohol, ammonia or abrasives to clean products. Avoid using in places where there is water or moisture.

Be careful not to drop any food or liquid on the product. Do not use external heat sources (such as microwave oven or hair dryer) to dry products. Contact with liquid will damage beyond warranty.

Warning

Do not attempt to repair or modify the product. Apart from packaging, the product does not contain any parts that can be repaired by the user. Disassembly of the product (including external screws and removal of the back cover) may result in damage beyond warranty. Do not use the product if it is contaminated, damaged, or seriously deformed. Only the manufacturer or authorized service provider can repair it. If you have any questions, please contact your dealer.

Warranty Regulations

Our company provides twelve month warranty to our customers.

LED Indicator

	Red	Blue
Power ON	Flash 1 Sec	Flash 1 Sec
Undocked	OFF	OFF
5V Charging (Standard Charger)	Solid 5 Sec	OFF
9V Charging (Quick Charge 3.0)	OFF	Solid 5 Sec
Full Charge	Remains OFF	
FOD (Foreign Object Detection)	Solid	
Abnormal	Solid	

The following situations are not covered by warranty

1. Beyond the warranty period.
2. The consumer disassembles the product by himself.
3. The product is damaged due to improper use.
4. Damage caused by improper use.
5. The damage caused by force.